

CLIENT: NWI

PROJECT NUMBER: 5889

PROOF: P3B

DATE: 15/12/14

DESCRIPTION: Advanced Remote - User Guide

SIZE: 2.24 "x 7.2" (Finished) Folded Brochures

COLOR: ● Cyan
● Magenta
● Yellow
● Black

ADVANCED REMOTE | USER GUIDE

FRONT COVER



INSIDE SPREAD

Your new Advanced Remote is a wireless remote featuring a mouse and a full QWERTY keyboard.

The front of the remote works the same as the standard remote, key features include:

APPS

The apps button takes you directly to the Arris Market (feature coming soon).

SEARCH

The search button takes you directly to the "search by title" feature.

VOD

The VOD button goes directly to the Video On Demand category in the menu.

The back of the remote has a keyboard that makes it easy to text and search. Ergonomic design ensures superior comfort.

BACK COVER

Pairing the Remote

If your advanced remote comes with a USB, you must "pair" the remote with your Pulse TV Media Player for all the buttons to work. Pairing the remote also eliminates the need to point the remote directly at the Media Player when pressing the buttons.

To pair the remote:

- If your remote came with a USB key, insert it into either a front or back USB port of the Media Player.
- Wait until you see a message confirming that the key has been detected (approximately 30 seconds).
- Point the remote at the Media Player.
- Press and hold the Up and SETUP keys until the remote power button blinks rapidly.
- After a few seconds, the power button on your remote will blink twice.
- This tells you that the remote has successfully paired.
- If the USB key is removed, the remote will be unpaired. The remote will still work unpaired in IR (Infrared) mode. To activate the remote in IR mode, press and hold the down cursor and SETUP keys until the LED flashes 4 times.

If you have any questions, visit nwtel.ca/pulsetv/support to connect with the Northwestel Support Portal.